



Kleerband w/D-Seals

Installation Instructions



Steps 1-3

Step 1: Flange Inspection First, clean flange of any dirt and debris. Inspect flange OD for any burrs or sharp edges that could cut or damage the flexible seal. These should be made smooth.



Step 4


Step 2: Grease Flange OD To reduce friction during installation, apply a light coat of grease to outer diameter surface of flange. Also apply a light coat of grease under the clear bridge plate (see layout). Use only Kleergel grease or approved equivalent.

Step 3: Large flange gaps Can be filled with grease before installing Kleerband, but be sure grease is packed well and smooth so the injected grease can push air out Relief Valve. Air pockets may prevent proper flow of grease when injecting through fittings.



Step 4

Step 4: Installing on Flange Wrap Kleerband around flange OD and fasten together SS worm gear screw with strip. Join ends of Kleerband as shown. The clear bridge plate must be between flexible band and worm gear(s). See next page for detail layout.



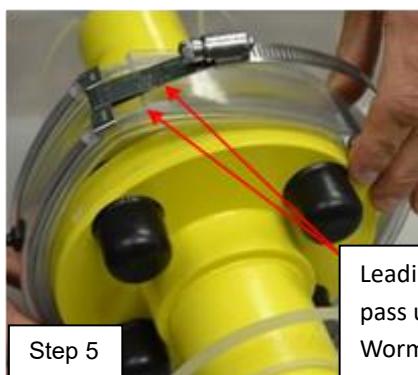


Step 5

Leading edge of bridge plate must pass under spot welded edge of Worm Gear. (See diagram on next page)

Step 5: Tightening Tighten screw until Kleerband ends are abutted.

Note: Kleerband is designed to be larger than Flange OD to insure proper sealing. **For smaller sizes:** Wrap Kleerband around pipe next to flange OD, join ends as stated above, and slide over flange

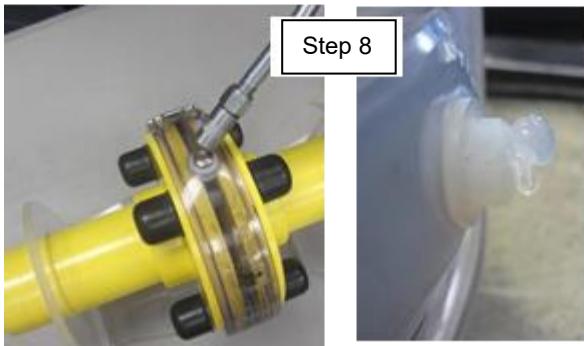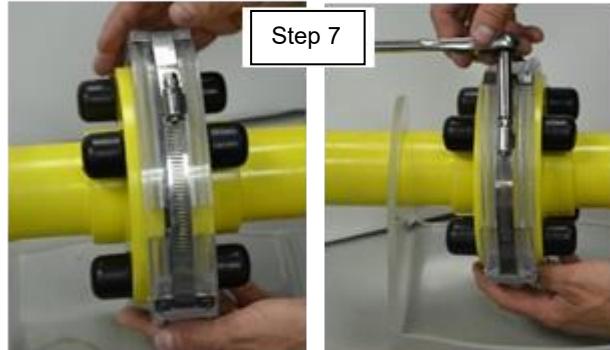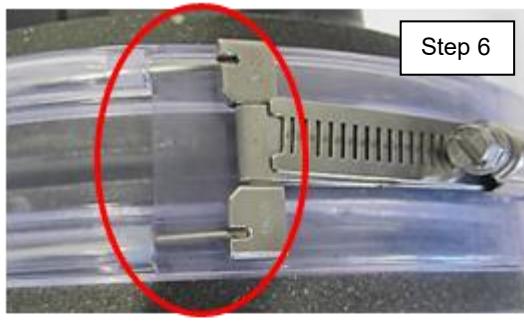

Step 6: Checks Prior to final tightening of the SS worm gears:

Band should be placed evenly over flange gap, and the grease fittings should be accessible.

Bridge plate must be under the full length of the Worm Gears, as shown on left. *Note: Leading edge of Bridge plate must pass under spot welded edge of Worm Gear.

Step 7: Final Torque Fully tighten the SS worm gear. For multiple worm gears, tighten worm gears evenly and incrementally around the Kleerband.

Final Torque: 2.8–3.95 nm

Step 8: Inject Grease Pump the Kleergel into the grease nipples until grease comes out of relief valve. For multiple nipples, work around perimeter of flange until grease comes out of all relief valves. Some grease may continue to flow out of valve after injection due to internal grease injection pressure.

Kleerband Layout

Worm Gears / Bridge Plate / Kleerband Ends

